


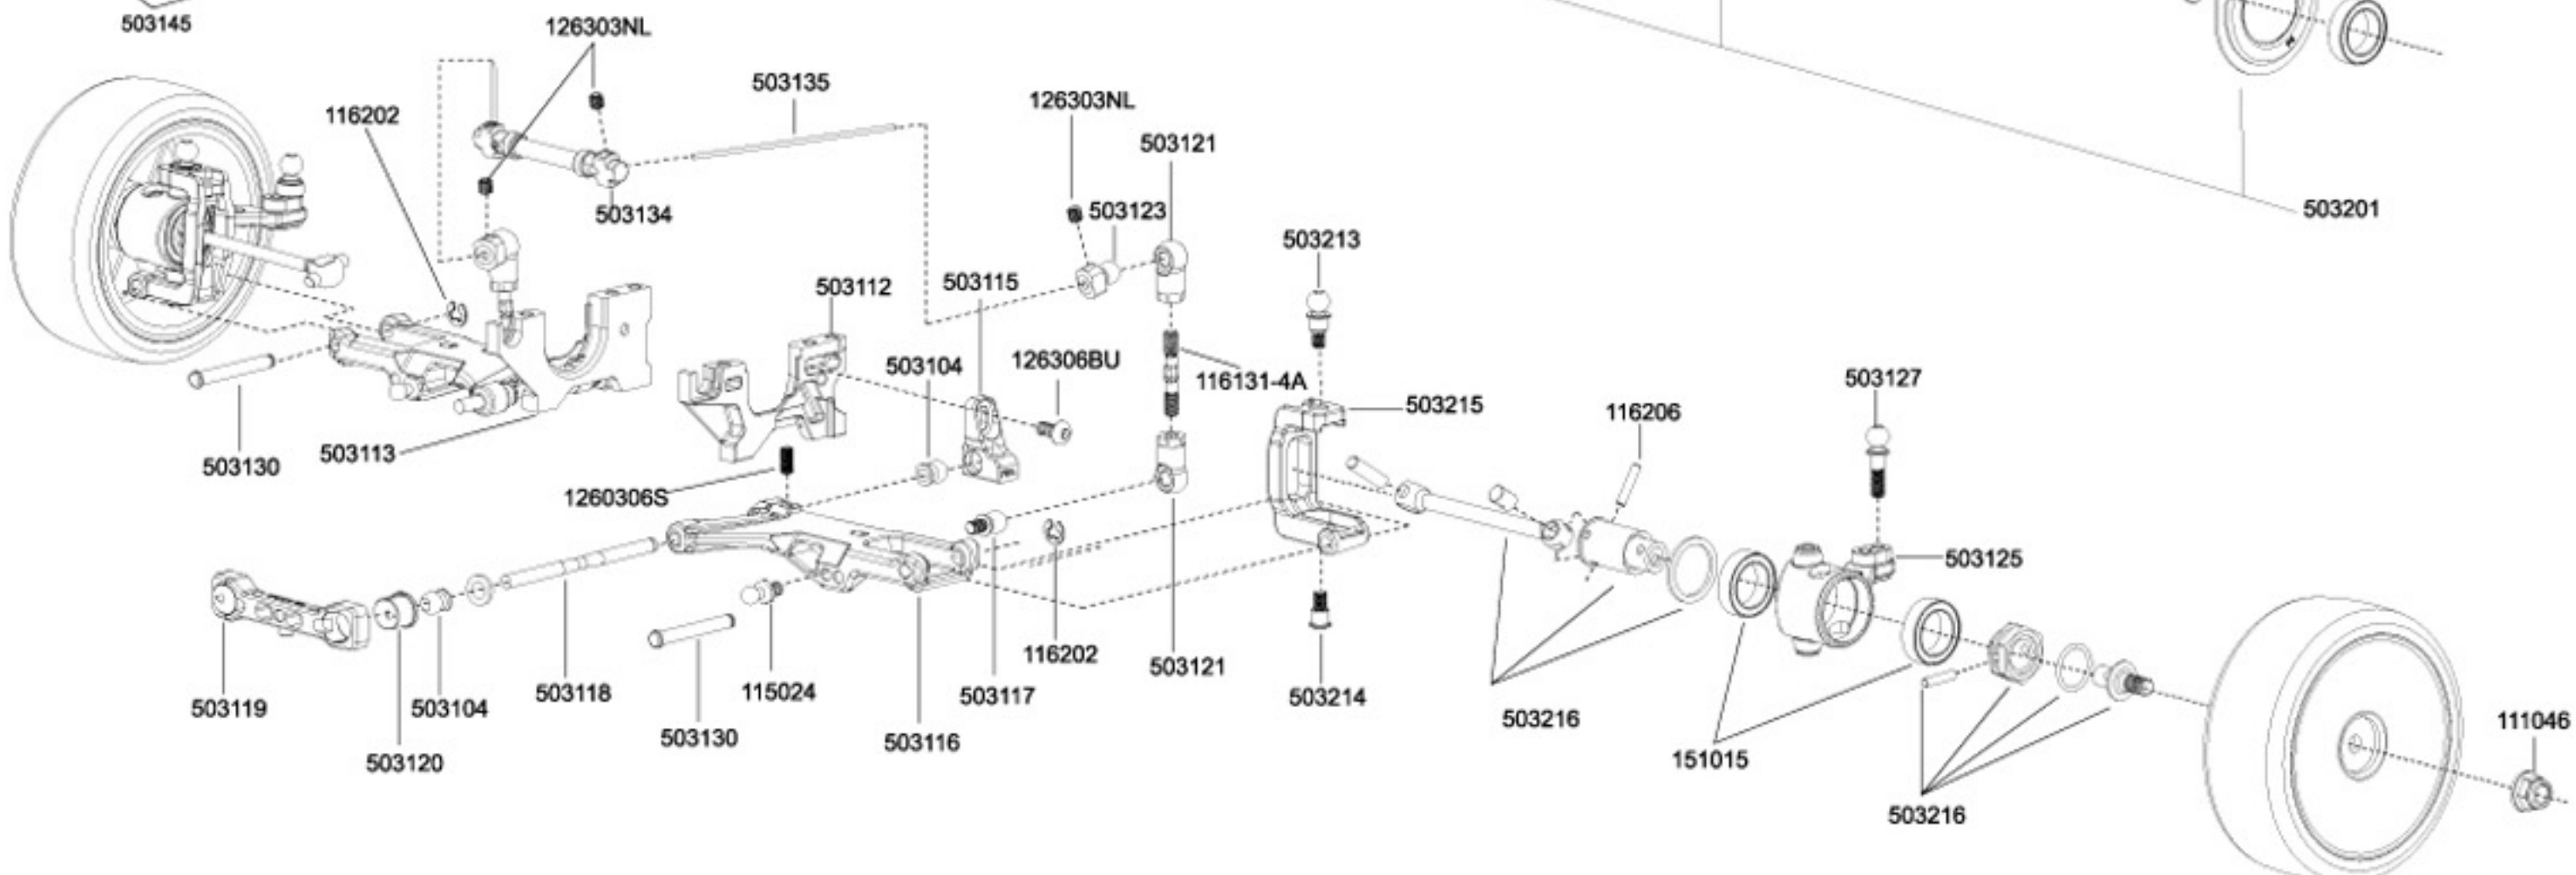
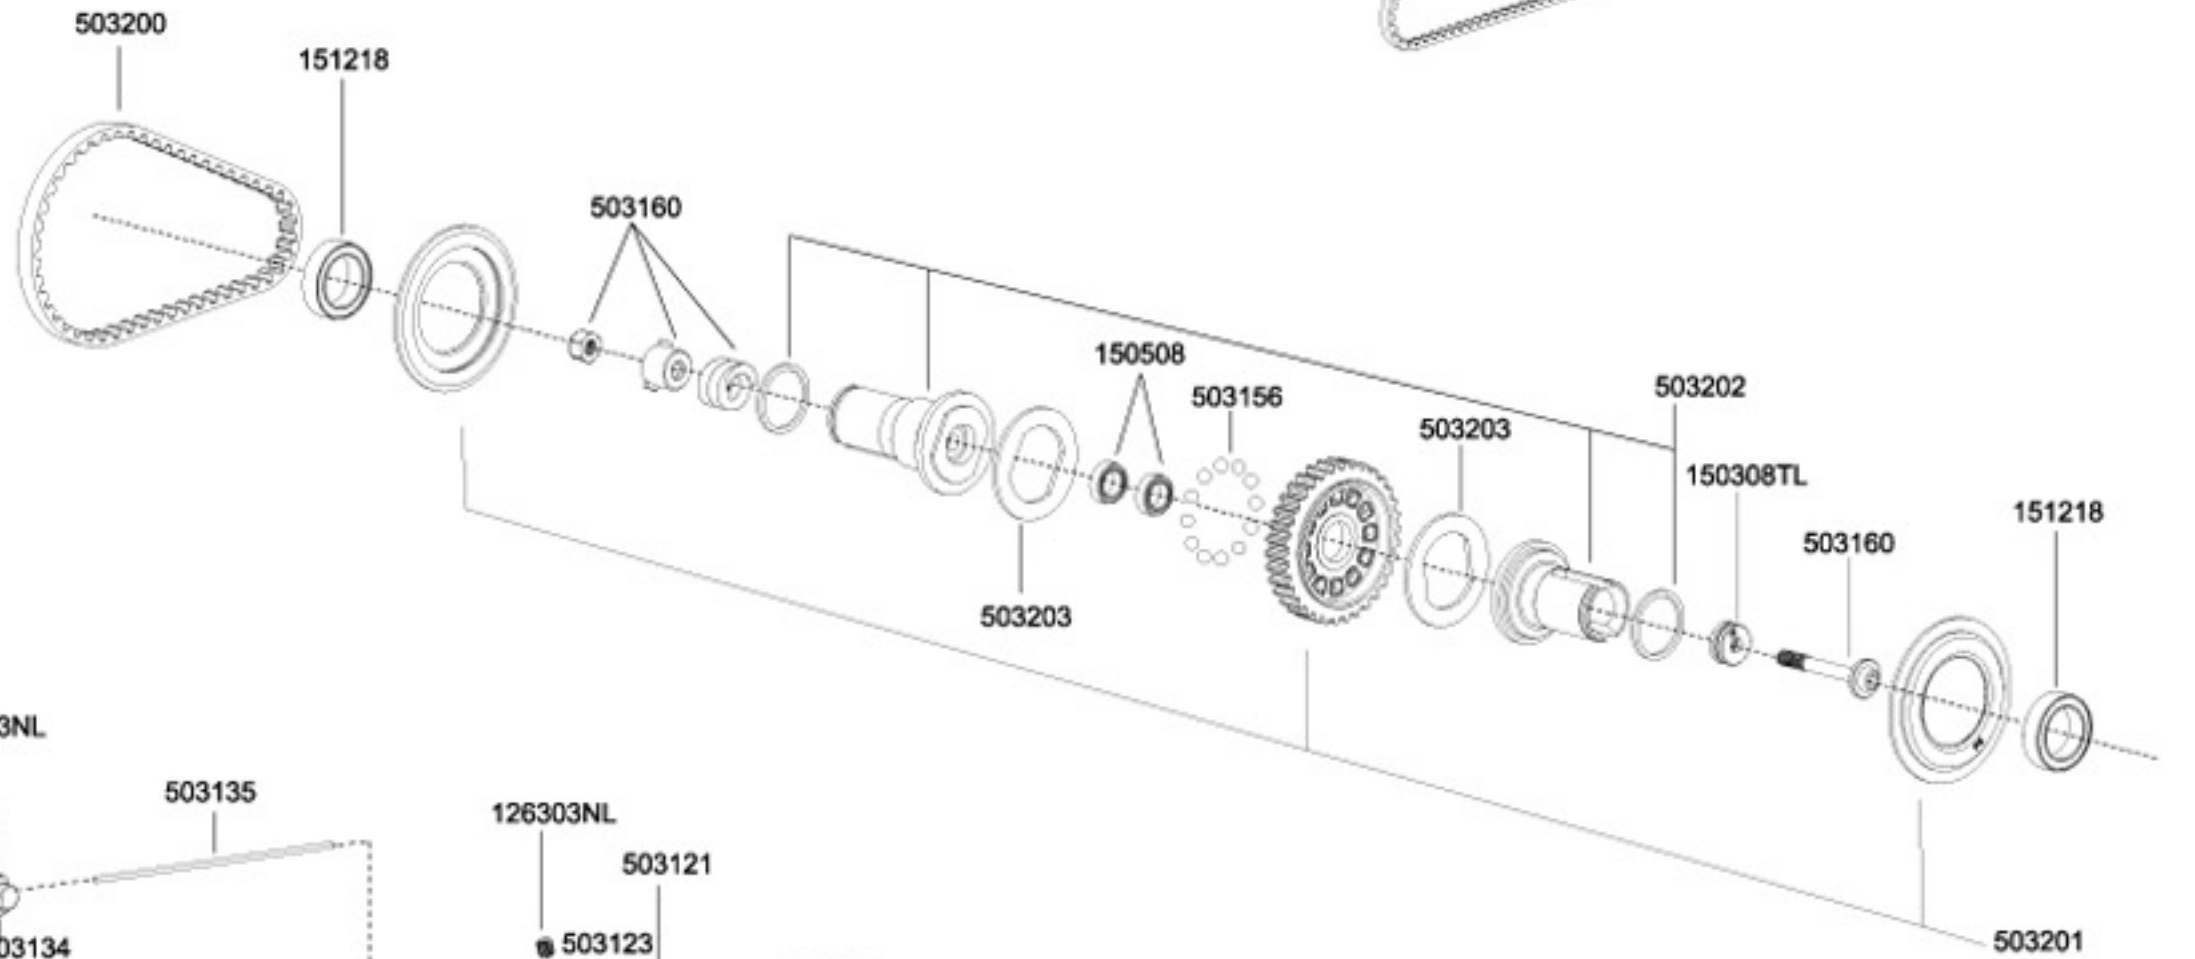
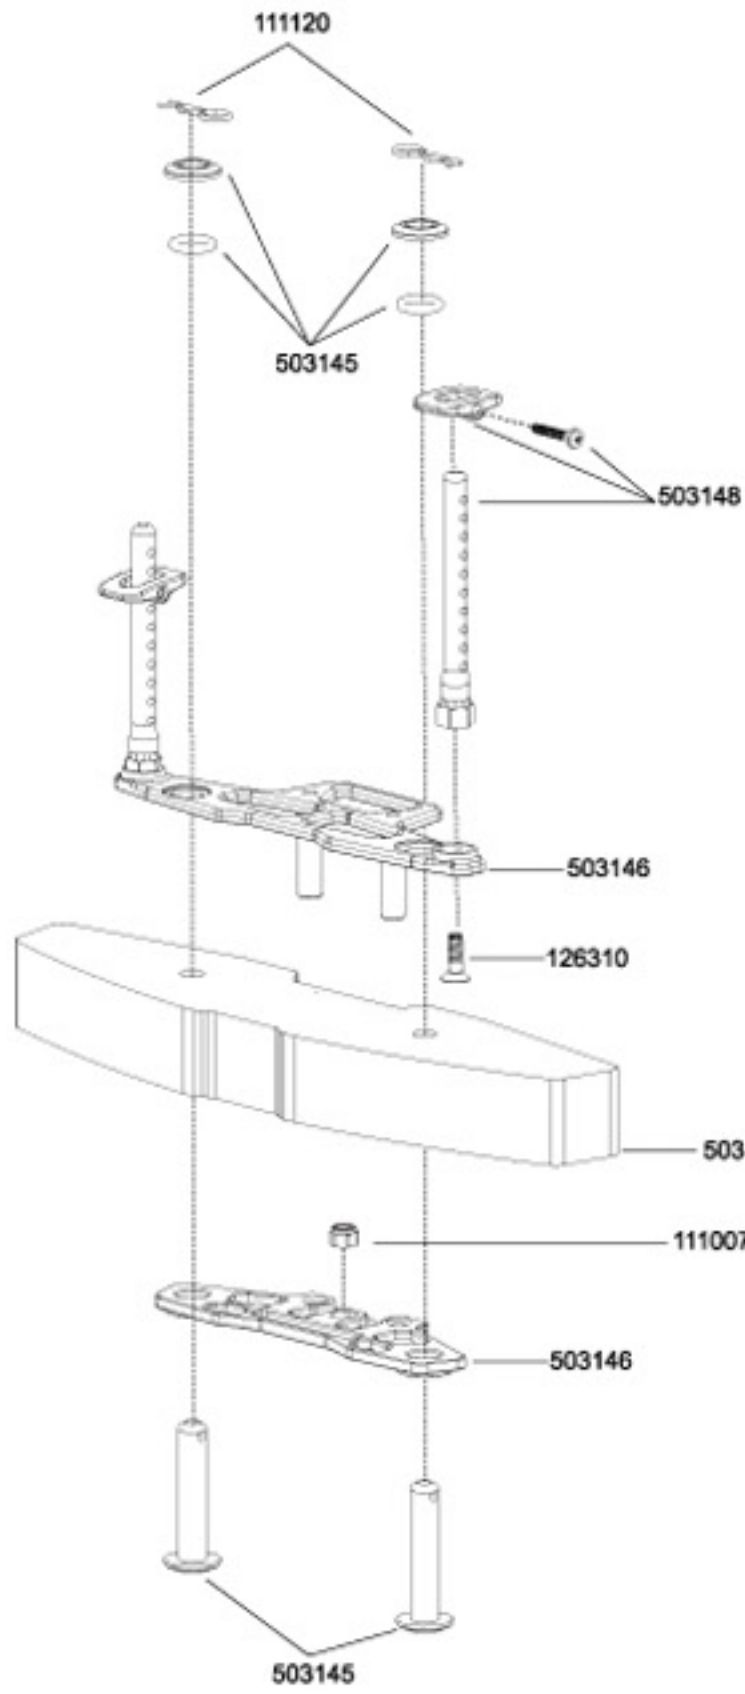


E4FS

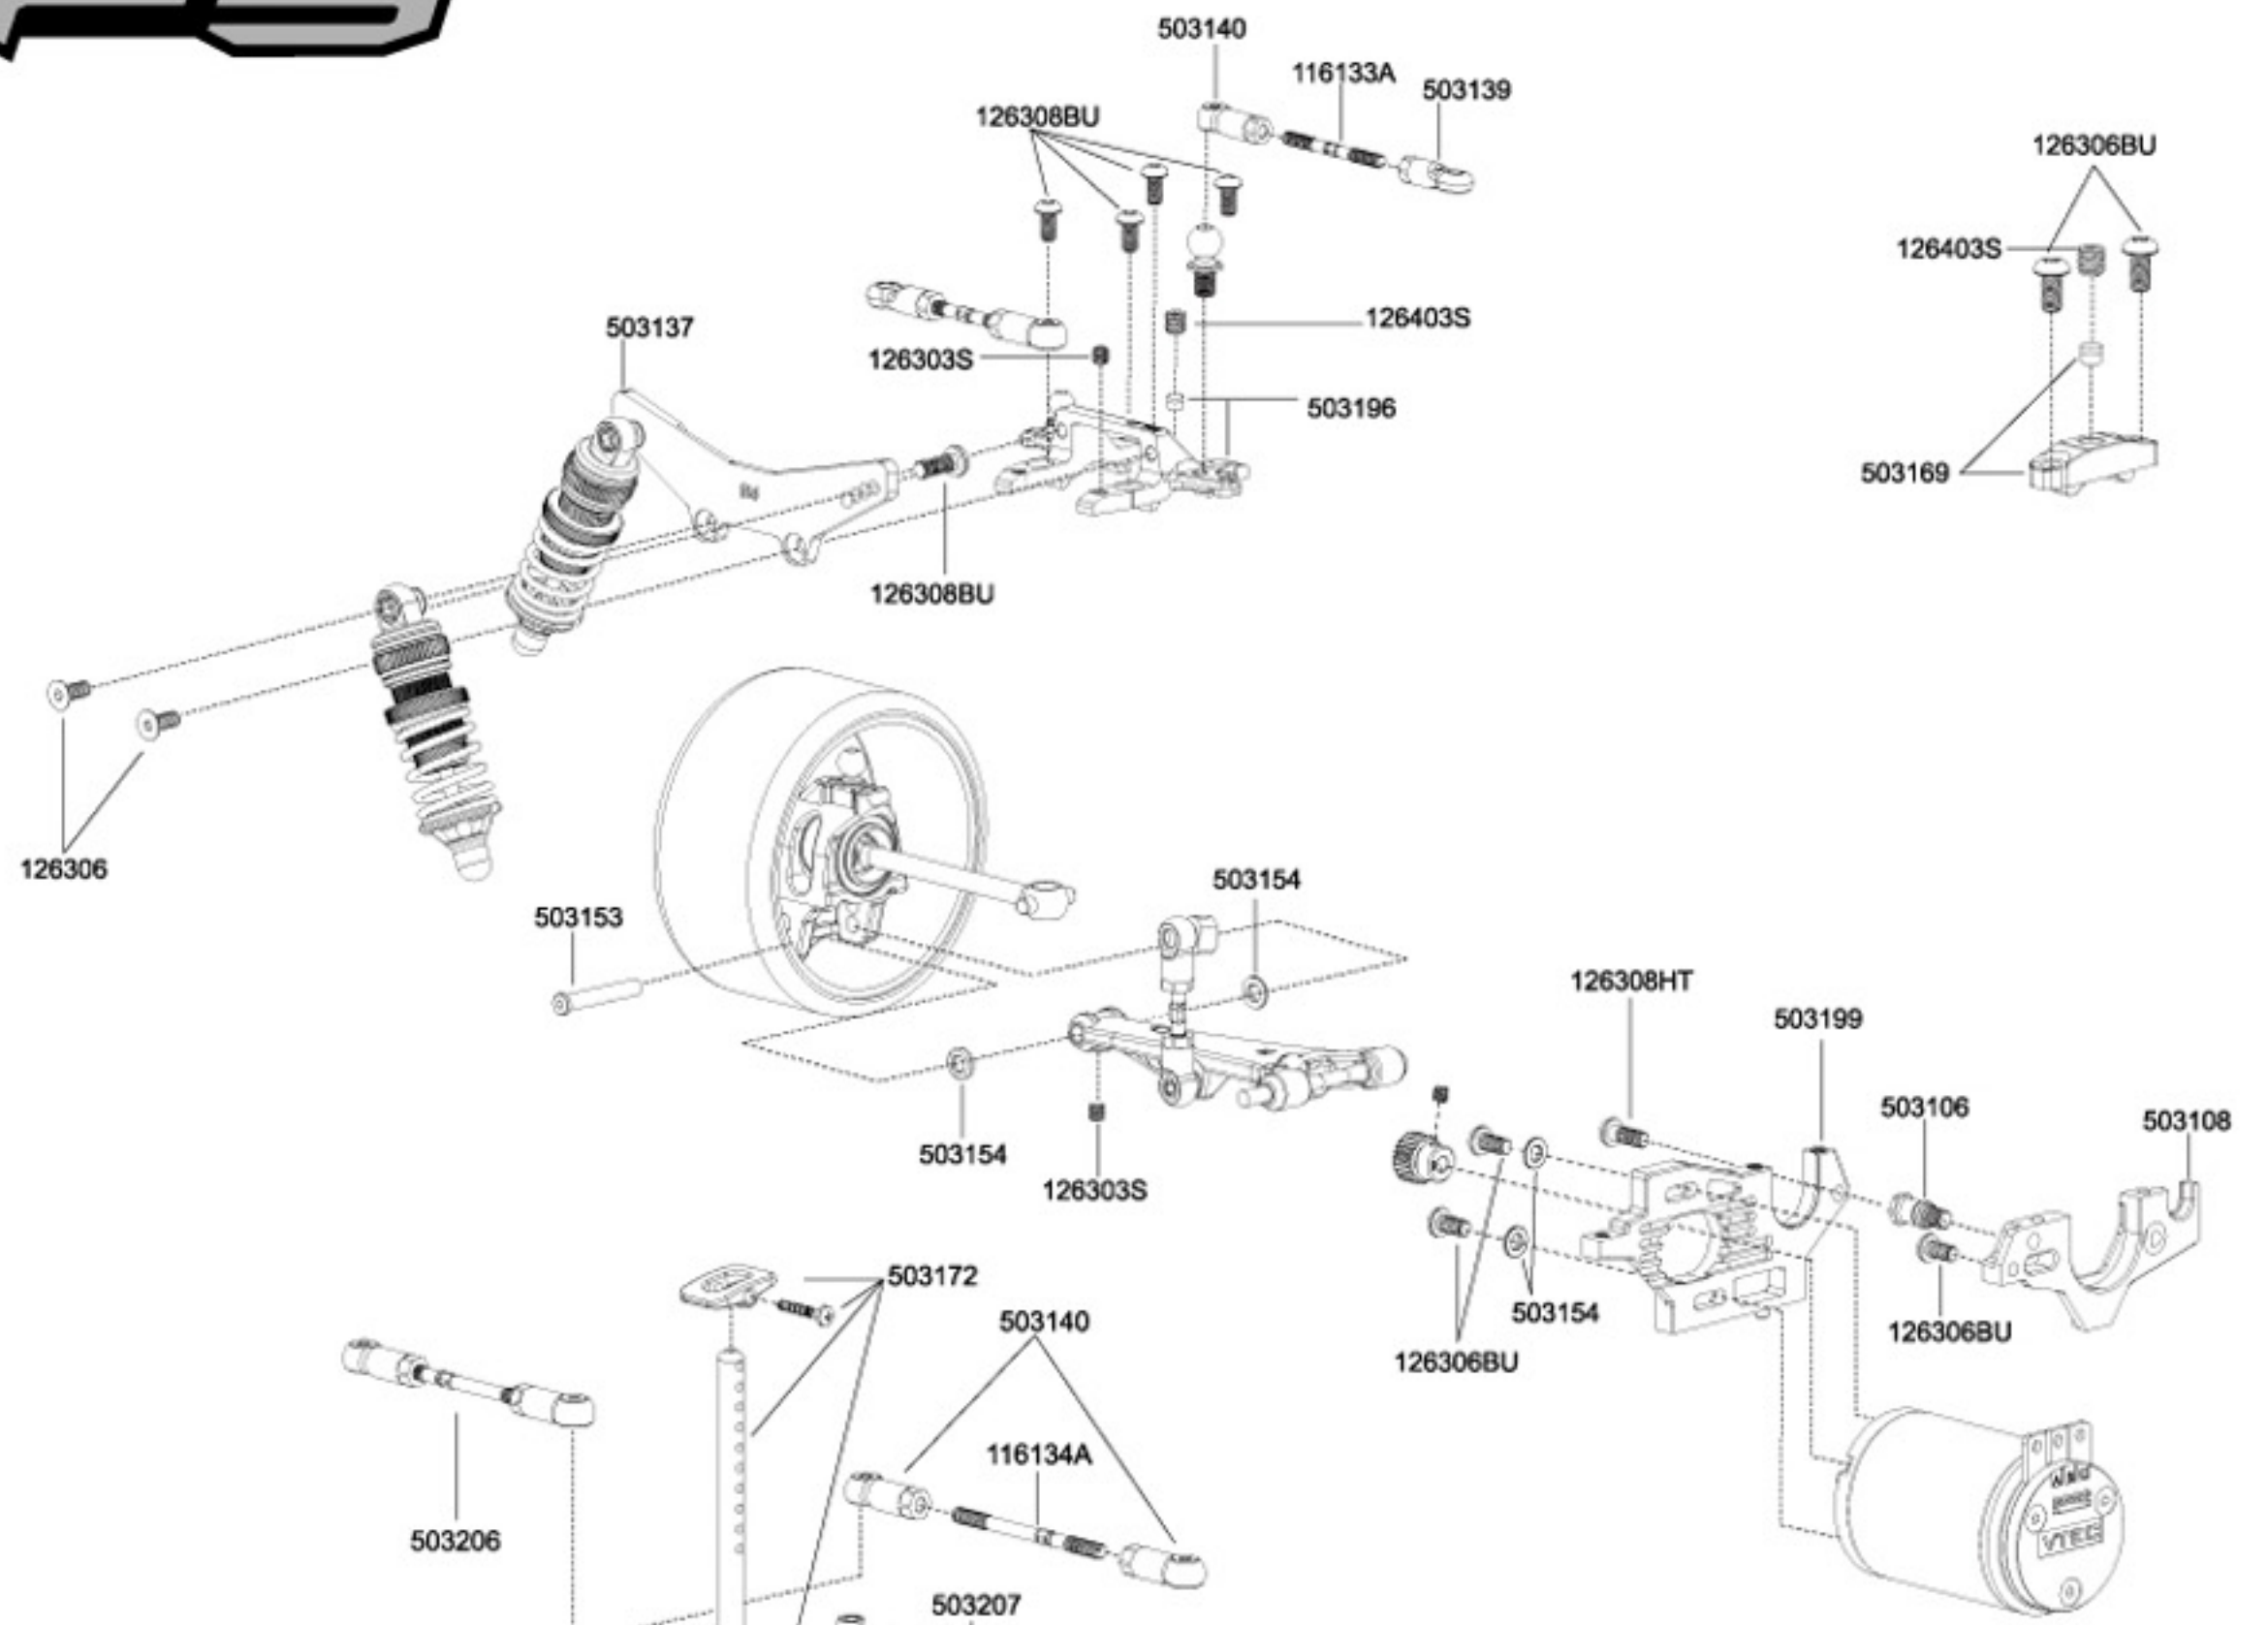

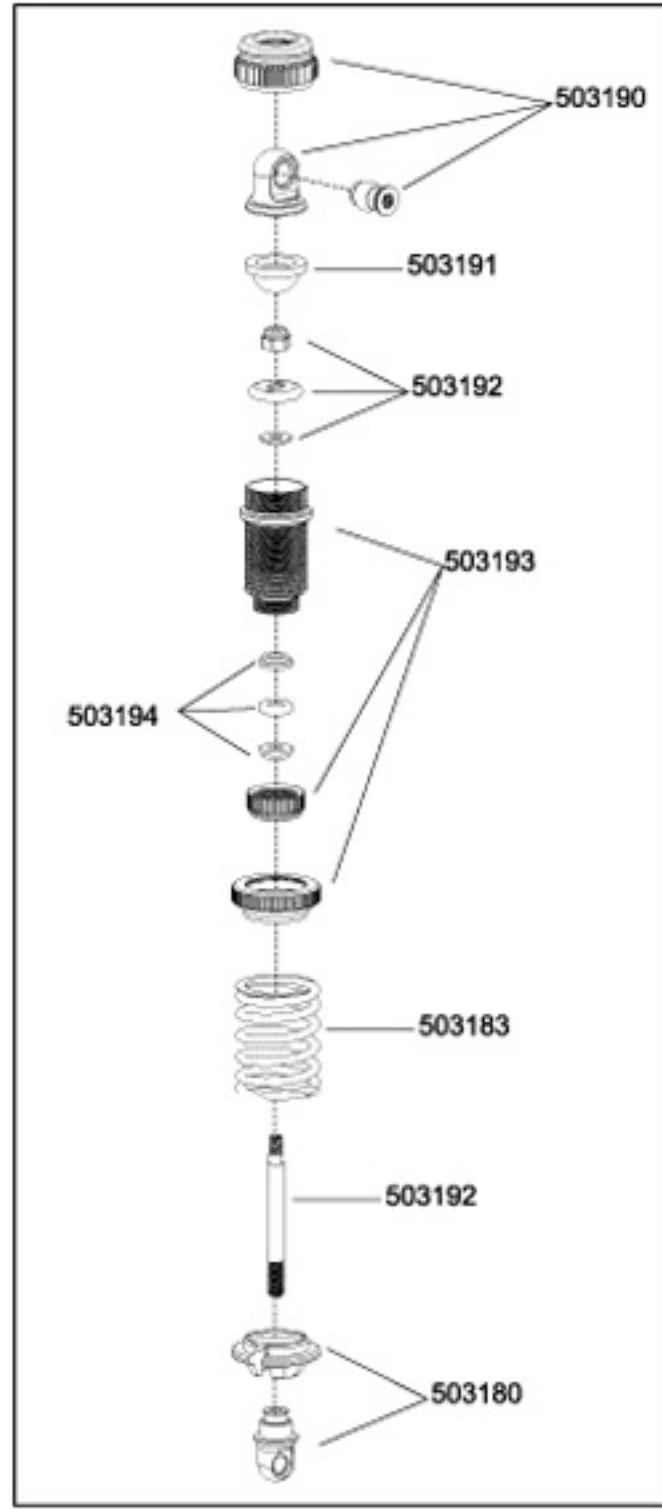

Use the included special 3M double side tape for steering servo installation. The servo case should follow the printed frame on the chassis. IT TAKES ONE DAY FOR THE 3M TAPE TO REACH ITS MAXIMUM EFFECT. After servo installation, don't race the car until the next day.

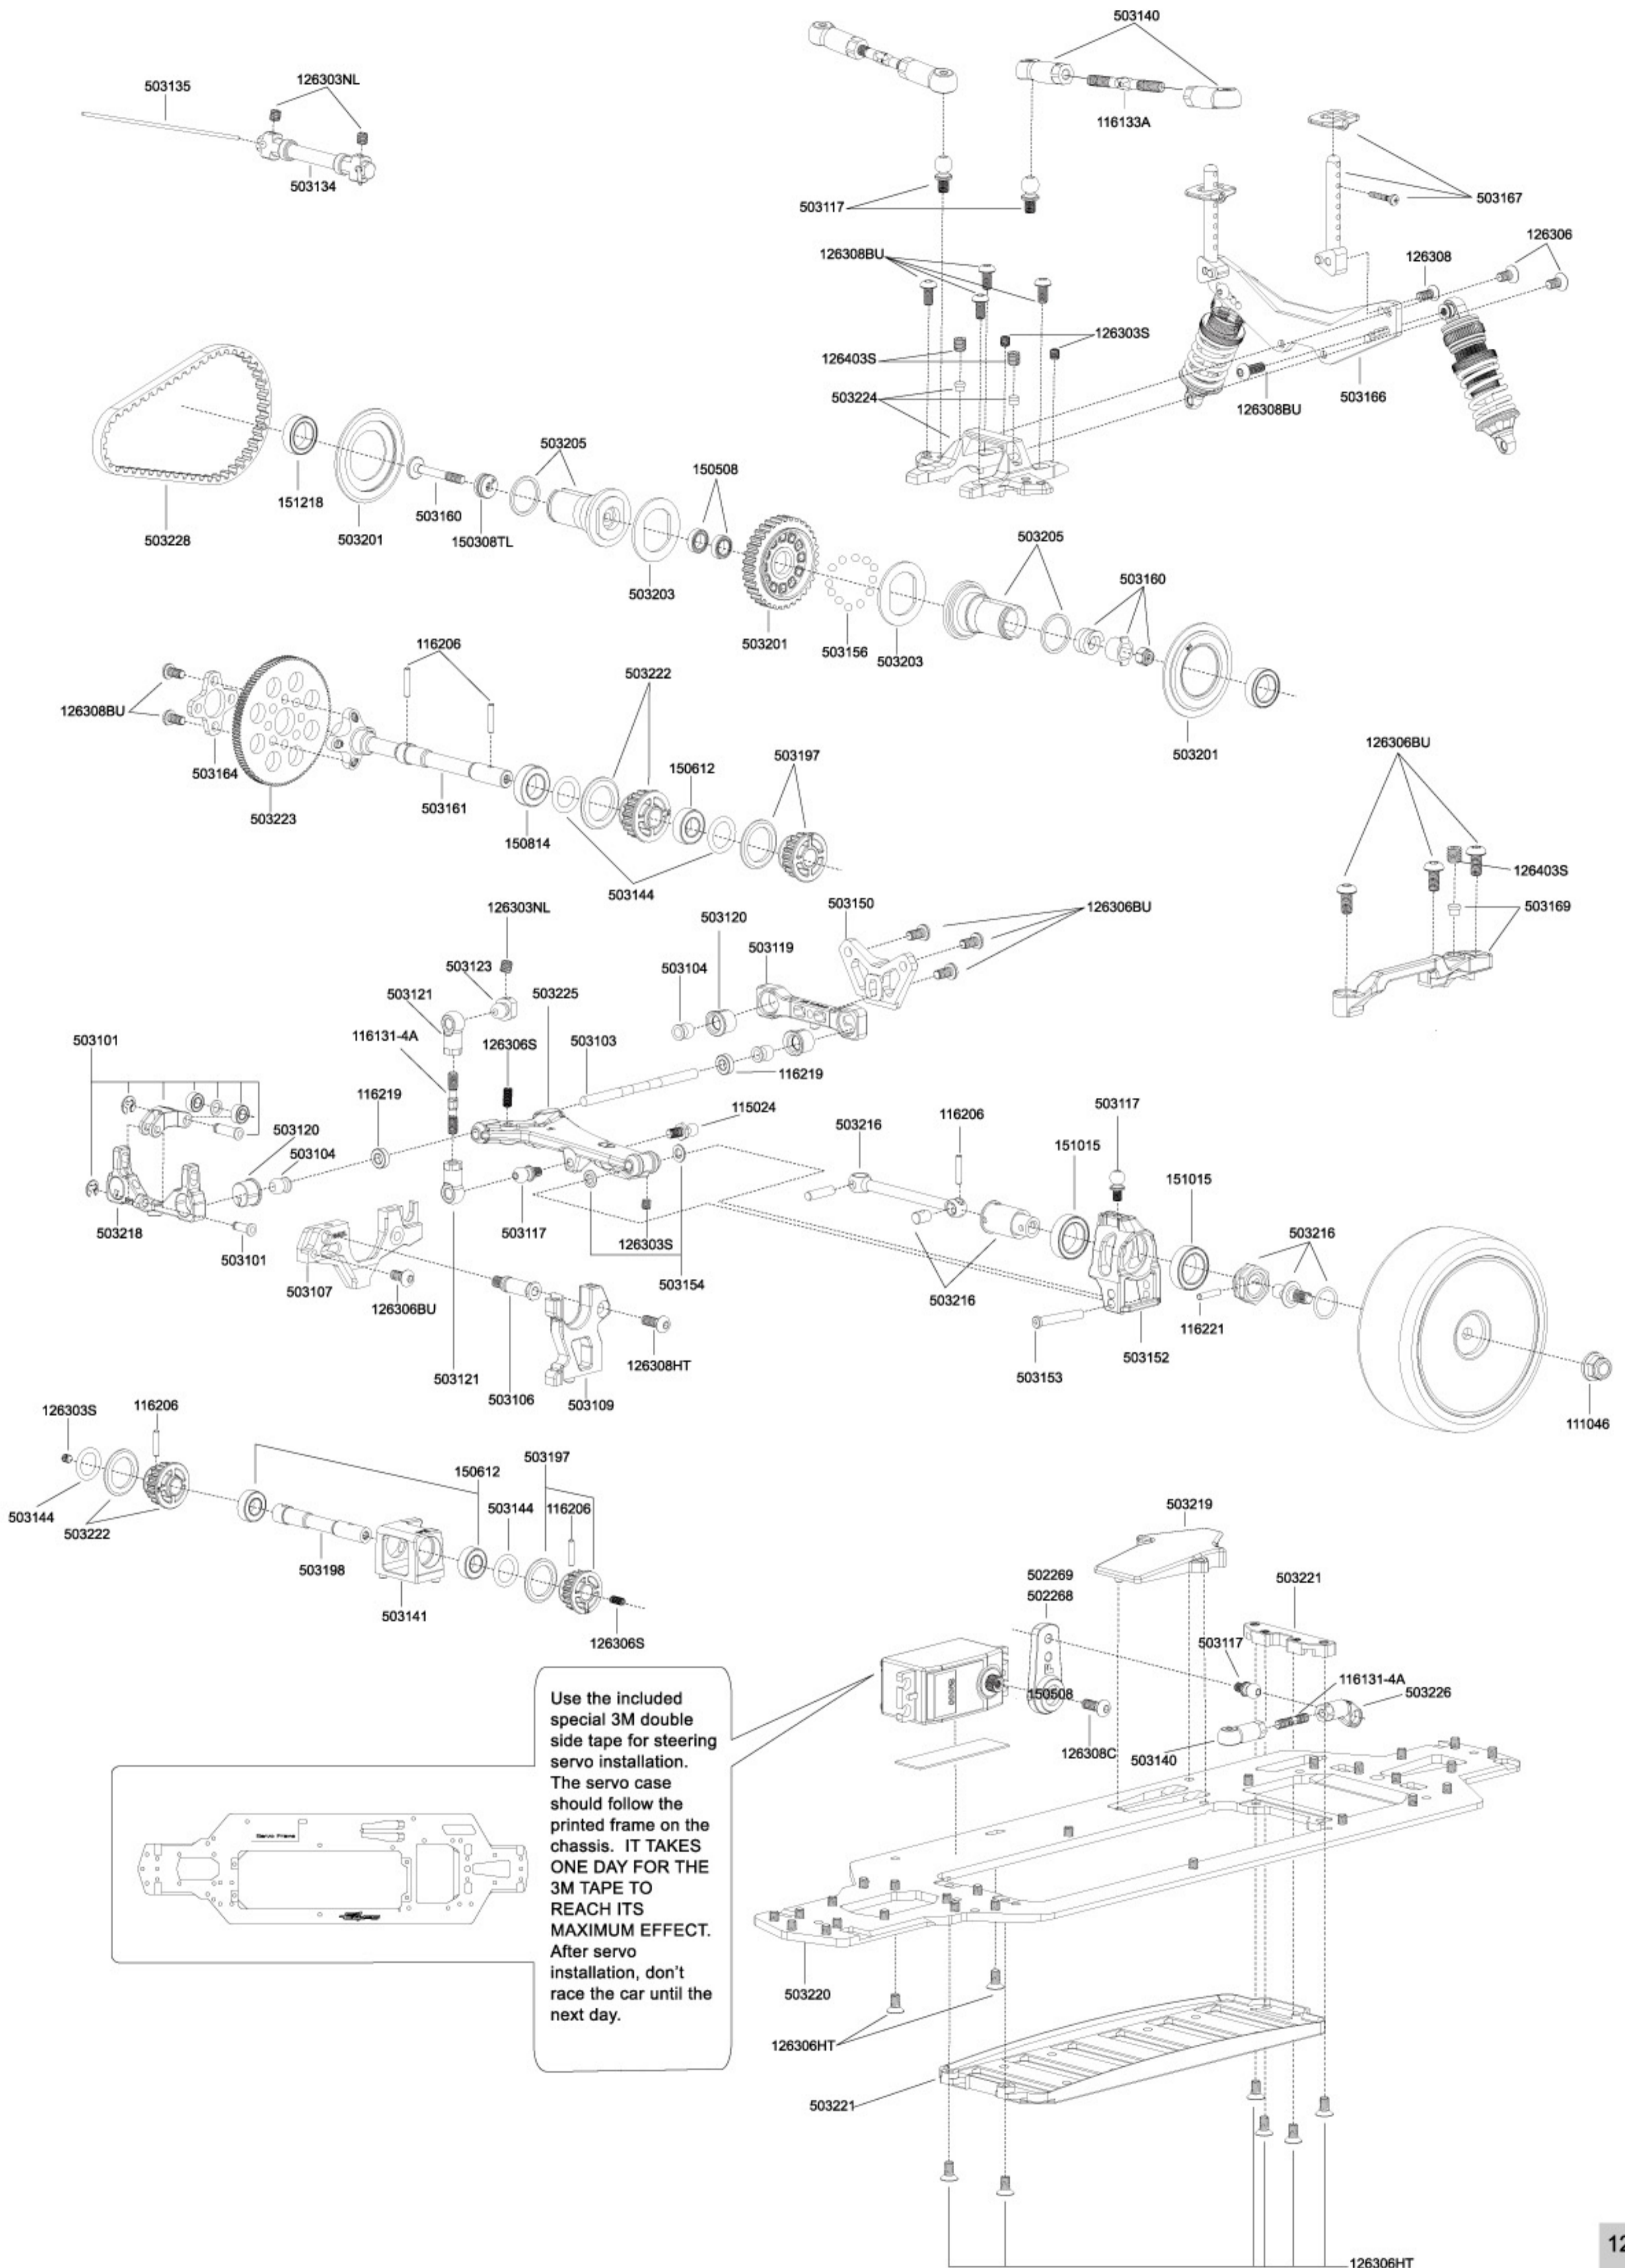